

RUCKUS One Online Help

(index.html)

Search



Wi-Fi Settings

This topic provides information on how to access the Wi-Fi Settings page for a venue and configure or view the settings.

You must first add a venue to configure the Wi-Fi Settings for the venue.

Use the following instructions to go to access the Wi-Fi Settings options for your venues.

1. On the navigation bar, click Venues.
The Venues page is displayed.
2. Select the Venue Name and click Edit. Alternatively, click Venue Name > (and then)Configure.
3. Select the Wi-Fi Configuration tab.
By default, the Radio tab is displayed.
Radio Tab

The screenshot displays the 'Wi-Fi Configuration' section of a management interface. At the top, there are four main tabs: 'Venue Details', 'Wi-Fi Configuration' (which is active), 'Switch Configuration', and 'Property Management'. Below these, there are five sub-tabs: 'Radio' (selected), 'Networking', 'Security', 'Network Control', and 'Advanced'. The 'Radio' sub-tab is highlighted with an orange border. On the left side of the 'Radio' sub-tab, there is a vertical sidebar with four options: 'Wi-Fi Radio' (selected with an orange bar), 'Load Balancing', 'Client Admission Control', and 'External Antenna'. The main content area is titled 'Wi-Fi Radio Settings'. It contains a 'Tri-band radio settings' toggle switch, which is currently turned off, followed by a help icon (?). Below this are two frequency selection buttons: '2.4 GHz' (highlighted with an orange border) and '5 GHz'. Underneath the frequency buttons is a 'Channel selection method:' label followed by a dropdown menu showing 'Background Scanning'. To the right of the dropdown is a blue link labeled 'Reset to Default Settings'. At the bottom left of the main content area are two buttons: 'Save' (orange) and 'Cancel' (white with a grey border).

4. By selecting the tabs, you can review or edit the Wi-Fi settings of the venue.

- Radio
- Networking
- Security
- Network Controls
- Advanced Settings