RUCKUS One Online Help (index.html)

Search Q

General Settings


On the **General** settings page of an access point, you can edit the IP settings.

Complete the following steps to edit the IP settings of an AP.

- 1. On the navigation bar, click **Wi-Fi** > (and then)**Access Points** > (and then) **Access Point List**. The **Wi-Fi** page is displayed.
- 2. Click the name of the AP to edit the IP settings.
- 3. On the upper-right corner, click **Configure**. The AP configuration page is displayed.

AP General Settings

6/9/25, 3:01 PM General Settings

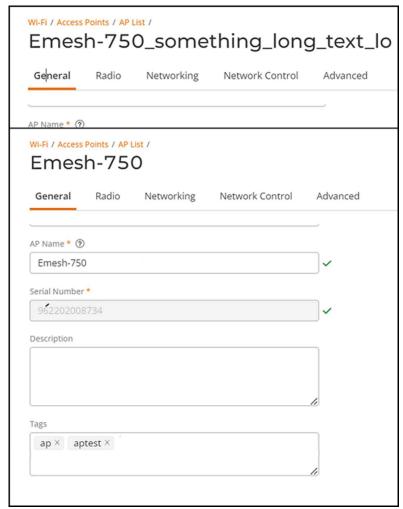

4. (Optional) Edit the AP name, description, tags, and GPS coordinates.

Note:

The GPS settings must correspond to the venue's country. When relocating an AP, the system ensures that the GPS coordinates are consistent with the venue's country and issues a warning message Cannot set AP GPS coordinates to a location in a different country code or country than the venue if there is a discrepancy. This rule does not apply to APs with AFC enabled and outdoor APs that support 6GHz.

5. After editing, click Apply.

800-73730-001 Rev E

29 May 2025

6/9/25, 3:01 PM General Settings

© 2024 CommScope, Inc. All rights reserved.