

RUCKUS One Online Help

(index.html)

Search



Deleting a Network

If you no longer need a network that you previously created, you can delete it from RUCKUS One.

Complete the following steps to delete a network from your RUCKUS One account.

1. From the navigation pane, click Wi-Fi > (and then) Wi-Fi Networks List.
The Networks page is displayed.
2. Select the Network Name and click Delete.
A confirmation message is displayed, in that click Delete Network. The network settings is deleted and will stop service to the following entities currently using this Network.

800-73730-001 Rev D 29 April 2025
© 2024 CommScope, Inc. All rights reserved.